

Quick Start

After proper wiring, please follow the below instructions.


1. Set the RS485 address of DM10 as 2-9.
2. Set the F18 serial port as "host" ([COMM.]> [serial port]).


Step 1

Open the ZKAccess3.5 software, click [**Device**]> [**New**], enter the name and IP address of F18, and then click [**OK**].

Step 2

Click [**More...**] > [**Add IO Expansion Board**], check the RS485 address of DM10, and then click [**OK**].

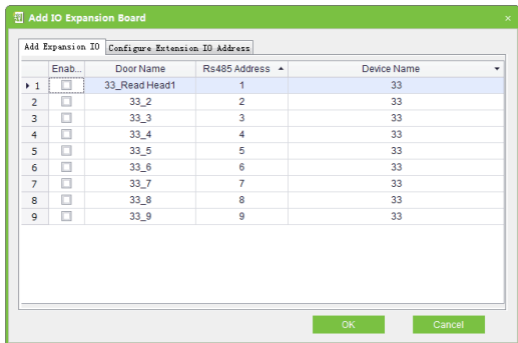

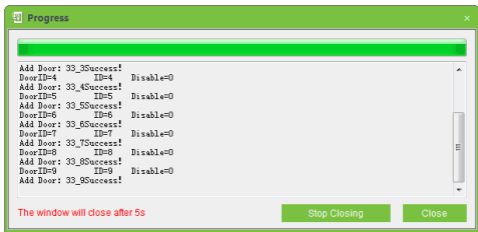

After successful configuration, the Indicator LED flashes every two 2 seconds, indicating that the communication is normal. After adding successfully, the parameters of the access control unit could be set, please refer to the ZKAccess 3.5 user manual for further details.

ZKTeco Industrial Park, No. 26, 188 Industrial Road,
Tangxia Town, Dongguan, China.

Phone : +86 769 - 82109991

Fax : +86 755 - 89602394

www.zkteco.com

